



Πλυντήριο Ρούχων

WFB-9B14STWBX

Οδηγίες Χρήσης

Προσοχή: Να διαβάσετε και να ακολουθήσετε όλες τις οδηγίες ασφάλειας πριν από την πρώτη χρήση του προϊόντος.

ΠΡΟΣΟΧΗ

- Αυτή η συσκευή δεν προορίζεται για χρήση από άτομα (συμπεριλαμβανομένων των παιδιών) με μειωμένη σωματική, αισθητηριακή ή διανοητική ικανότητα ή έλλειψη εμπειρίας και γνώσης, εκτός εάν τους έχει δοθεί επίβλεψη ή οδηγίες σχετικά με τη χρήση της συσκευής από άτομο που είναι υπεύθυνο για την ασφάλειά τους.
- Θα πρέπει να υπάρχει επίβλεψη στα παιδιά για να είστε βέβαιοι ότι δεν παίζουν με τη συσκευή. Ο καθαρισμός και η συντήρηση επιπέδου χρήστη δεν πρέπει να γίνονται από παιδιά χωρίς επίβλεψη. Παιδιά ηλικίας κάτω των 3 ετών θα πρέπει να κρατούνται μακριά από το προϊόν, εκτός κι αν υπάρχει συνεχής επίβλεψη.
- Εάν το καλώδιο ρεύματος είναι φθαρμένο, θα πρέπει να αντικατασταθεί από τον κατασκευαστή, τον αντιπρόσωπο ή άλλα εξειδικευμένα άτομα ώστε να αποφευχθούν κίνδυνοι.
- Πρέπει να χρησιμοποιηθούν οι καινούριοι σωλήνες που παρέχονται με τη συσκευή και δεν θα πρέπει να επαναχρησιμοποιηθούν παλιοί σωλήνες που τυχόν είχατε.
- Αυτή η συσκευή προορίζεται για χρήση σε οικιακές και παρόμοιες εφαρμογές όπως:
 - χώροι κουζίνας προσωπικού σε καταστήματα, γραφεία και άλλα περιβάλλοντα εργασίας
 - εξοχικά
 - από πελάτες σε ξενοδοχεία, μοτέλ και άλλα περιβάλλοντα κατοικιών.
 - περιβάλλοντα τύπου bed and breakfast
 - κοινόχρηστοι χώροι σε πολυκατοικίες ή κοινά πλυντήρια.
- Σε περίπτωση απώλειας των οδηγιών χρήσης, επικοινωνήστε με το σέρβις.
- Πίεση νερού: 0,03- 1Mpa.
- **ΠΡΟΣΟΧΗ:** Προκειμένου να αποφευχθεί κίνδυνος λόγω ακούσιας επαναφοράς της λειτουργίας σε περίπτωση εξαναγκασμένης διακοπής λόγω υπερθέρμανσης, αυτή η συσκευή δεν πρέπει να είναι συνδεδεμένη σε εξωτερικό διακόπτη (πχ. χρονοδιακόπτη ή σε ηλεκτρικό κύκλωμα που ενεργοποιείται και απενεργοποιείται ανά τακτά χρονικά διαστήματα).

Προειδοποιήσεις ασφάλειας (θα πρέπει να τις σεβαστείτε)

- Προκειμένου να αποφευχθεί βλάβη ή τραυματισμός του χρήστη ή απώλεια περιουσία άλλων, φροντίστε να σεβαστείτε τις ακόλουθες προειδοποιήσεις ασφάλειας.





Προειδοποιήσεις


- Κίνδυνος ηλεκτροπληξίας.
 1. Η τάση ρεύματος πρέπει να είναι 220V- 240V και η ένταση πάνω από 10A. Επίσης θα πρέπει να είναι συνδεδεμένη η ακίδα γείωσης.
 2. Όταν συνδέετε ή αποσυνδέετε το καλώδιο ρεύματος, παρακαλούμε να τραβάτε από το φως και όχι από το σώμα του καλωδίου. Να μη χρησιμοποιείτε το καλώδιο ρεύματος σε περίπτωση που έχει υποστεί φθορά. Αν είναι λερωμένο το φως του καλωδίου ρεύματος, παρακαλούμε να το σκουπίσετε χρησιμοποιώντας ένα στεγνό πανί.
 3. Προσέξτε να μην είναι βρεγμένα τα χέρια σας κατά την σύνδεση ή αποσύνδεση του φως ρεύματος από την πρίζα.
 4. Παρακαλούμε να αποσυνδέετε το φως ρεύματος από την πρίζα μόλις ολοκληρώνετε τη χρήση του πλυντηρίου και σε περίπτωση που απαιτηθεί επισκευή ή καθαρισμός.
- Κίνδυνος υψηλής θερμοκρασίας
 1. Όταν πλένετε σε υψηλές θερμοκρασίες, είναι φυσικό να ζεσταίνεται η γυάλινη πόρτα του πλυντηρίου ρούχων. Παρακαλούμε να μην αγγίζετε τη γυάλινη πόρτα (ειδικά τα παιδιά).
 2. Αν θέλετε να ανοίξετε την πόρτα μετά από πλύση σε υψηλές θερμοκρασίες, να περιμένετε λίγο να πέσει η θερμοκρασία σε ασφαλές επίπεδο. Η πόρτα θα ξεκλειδώσει αυτόματα.
- Κίνδυνος τραυματισμού
 1. Μην τοποθετείτε βαριά αντικείμενα πάνω στο πλυντήριο ρούχων.
 2. Αν θέλετε να μετακινήσετε το πλυντήριο, παρακαλούμε να ζητήσετε βοήθεια από άλλα άτομα.
 3. Για επισκευές, θα πρέπει να απευθυνθείτε μόνο σε εξειδικευμένο τεχνικό.
- Κίνδυνος φωτιάς και διαρροής ρεύματος
 1. Μην αφήνετε το πλυντήριο κοντά σε εστίες φωτιάς, αναμμένα τσιγάρα, κεριά και εύφλεκτα υλικά.
 2. Παρακαλούμε να μην ψεκάζετε νερό στον πίνακα ελέγχου του πλυντηρίου ρούχων.
 3. Παρακαλούμε να μην βάζετε το πλυντήριο ρούχων σε εξωτερικό χώρο ή σε πολύ υγρά μέρη.
 4. Παρακαλούμε να συνδέσετε το σωλήνα αποστράγγισης και να βεβαιωθείτε ότι δεν είναι φραγμένος.
- Κίνδυνος τραυματισμού
 1. Παρακαλούμε να αποθηκεύσετε τη συσκευασία μόλις βγάλετε από μέσα το πλυντήριο. Μην αφήνετε τα παιδιά να αγγίζουν ή να βάζουν τμήματα της συσκευασίας στο στόμα τους.
 2. Μην αφήνετε τα παιδιά να χρησιμοποιούν ή να ανεβαίνουν πάνω στο πλυντήριο ρούχων.
 3. Παρακαλούμε να κλείνετε την πόρτα μετά από τη χρήση για να μην υπάρχει κίνδυνος να μπουν παιδιά στο εσωτερικό του πλυντηρίου.
- Κίνδυνος φθοράς των ρούχων
 1. Παρακαλούμε να μην πλένετε αδιάβροχα ρούχα, ρούχα που περιέχουν πούπουλα και υπνόσκακους.
 2. Παρακαλούμε να πλένετε ρούχα που επιδέχονται πλύσιμο σε πλυντήριο ρούχων. Ακολουθήστε τις οδηγίες για περισσότερες πληροφορίες.
- Κίνδυνος έκρηξης
 1. Παρακαλούμε να μην πλένετε ρούχα που είναι λερωμένα από κηροζίνη, βενζίνη, διαλυτικό ή εύφλεκτα υλικά.
 2. Παρακαλούμε να μην χρησιμοποιείτε το πλυντήριο σε περίπτωση διαρροής υγραερίου ή άλλου εύφλεκτου αερίου.
- Όταν αποσυνδέσετε το φως από την πρίζα ρεύματος, η κλειδαριά της πόρτας ξεκλειδώνει ακόμη κι αν υπάρχει μεγάλη ποσότητα νερού στο εσωτερικό του πλυντηρίου ρούχων. Πριν ανοίξετε την πόρτα να ελέγξετε το επίπεδο του νερού ώστε να αποφύγετε ατυχήματα.

Ονομασία εξαρτημάτων

Περιγραφή παρεχόμενων αξεσουάρ

Οδηγίες χρήσης	Σωλήνας παροχής νερού	Κλειδί	Καπάκια βιδών μεταφοράς
			

Ονομασία εξαρτημάτων

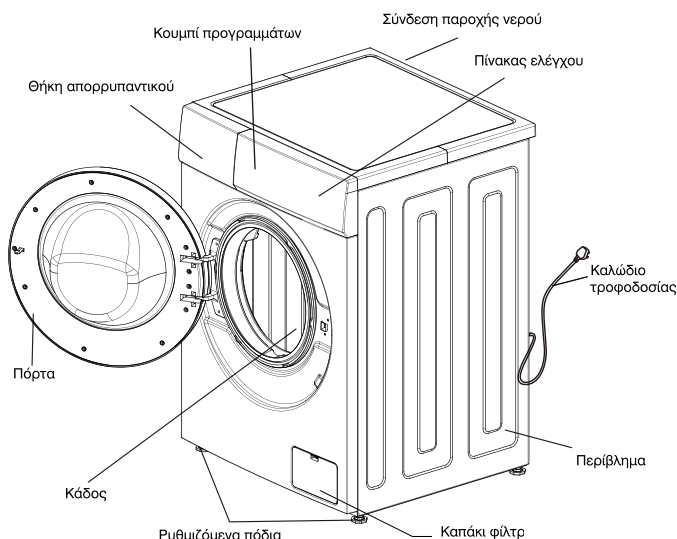

Σημαντικές σημειώσεις:

1. Η εμφάνιση του προϊόντος και τα τεχνικά χαρακτηριστικά μπορεί ν' αλλάξουν χωρίς προειδοποίηση, με γνώμονα πάντα την αναβάθμιση των επιδόσεων και της ποιότητας του προϊόντος.
2. Η εμφάνιση του προϊόντος και τα τεχνικά χαρακτηριστικά που αναφέρονται σ' αυτές τις οδηγίες είναι ενδεικτικά και μπορεί να διαφέρουν από το προϊόν που έχετε στα χέρια σας.

Σημείωση:

1. Κατά την πρώτη χρήση μπορεί να παρατηρήσετε ότι αποστραγγίζει λίγο νερό. Αυτό το νερό που έχει απομείνει εντός του πλυντηρίου είναι από τη διαδικασία δοκιμής. Αυτό είναι φυσιολογικό και δεν πρέπει να σας ανησυχεί.
2. Μετά από κάθε χρήση, παρακαλούμε να αφαιρείτε το φιλτράκι ρεύματος από την πρίζα και να κλείνετε τη βρύση παροχής νερού για να μην υπάρχει πιθανότητα πλημμύρας ή φωτιάς.

Οδηγίες εγκατάστασης

- Βεβαιωθείτε ότι η θερμοκρασία του σημείου όπου θα εγκατασταθεί ή τοποθετηθεί το πλυντήριο ρούχων δεν πέφτει κάτω από τους 0°C. Μην το τοποθετήσετε σε εξωτερικό χώρο.
- Εγκαταστήστε το πλυντήριο ρούχων σωστά, σύμφωνα με τα πρότυπα και τους ισχύοντες κανονισμούς.
- Να εξασφαλίσετε ότι θα υπάρχει επαρκής εξαερισμός στο κάτω μέρος του πλυντηρίου σε περίπτωση που το τοποθετήσετε πάνω σε χαλί.
- Σε εξοχικές κατοικίες θα πρέπει να έχετε υπόψη σας ότι υπάρχουν πάρα πολλά έντομα. Διατηρήστε καθαρό το περιβάλλον όπου βρίσκεται το πλυντήριο, επειδή τυχόν ζημιές που προκαλούνται από κατσαρίδες ή άλλα έντομα δεν εμπίπτουν στην εγγύηση του πλυντηρίου.
- Αυτό το πλυντήριο ρούχων δεν προορίζεται για χρήση ως εντοιχισμένο.

Βίδες μεταφοράς

Τα πλυντήρια διαθέτουν βίδες μεταφοράς, οι οποίες είναι τοποθετημένες πριν τη μεταφορά για την αποφυγή εσωτερικών ζημιών στον κάδο, οι οποίες ενδέχεται να ανακύψουν κατά τη μεταφορά.

Αφαίρεση των βιδών μεταφοράς (ΠΡΟΣΟΧΗ, ΣΗΜΑΝΤΙΚΟ!)

1. Για να μην προκληθούν ζημιές στο πλυντήριο κατά τη διάρκεια της μεταφοράς, έχουν τοποθετηθεί 4 βίδες. Πριν χρησιμοποιήσετε το πλυντήριο ρούχων, αφαιρέστε αυτές τις βίδες (βλ. Εικ. 1).


- **Εάν δεν αφαιρέσετε τις βίδες, θα προκληθούν βίαιοι κραδασμοί, θόρυβος και προβλήματα.**

2. Χρησιμοποιήστε το παρεχόμενο κλειδί για να χαλαρώσετε τις 4 βίδες. (βλέπε Εικ. 2).

3. Ξεβιδώστε και περιστρέψτε ελαφρά το λάστιχο της κάθε βίδας και μετά βγάλτε τις μία - μία. Φυλάξτε τις βίδες και το κλειδί ώστε να τα χρησιμοποιήσετε – αν χρειαστεί - μελλοντικά (βλ. Εικ. 3).

- Σε περίπτωση που θέλετε να μεταφέρετε το πλυντήριο ρούχων, θα πρέπει πρώτα να τοποθετήσετε τις βίδες μεταφοράς.

4. Χρησιμοποιήστε τα παρεχόμενα προστατευτικά καπάκια για να σφραγίσετε τις τρύπες όπου υπήρχαν οι βίδες μεταφοράς (βλ. Εικ. 4).

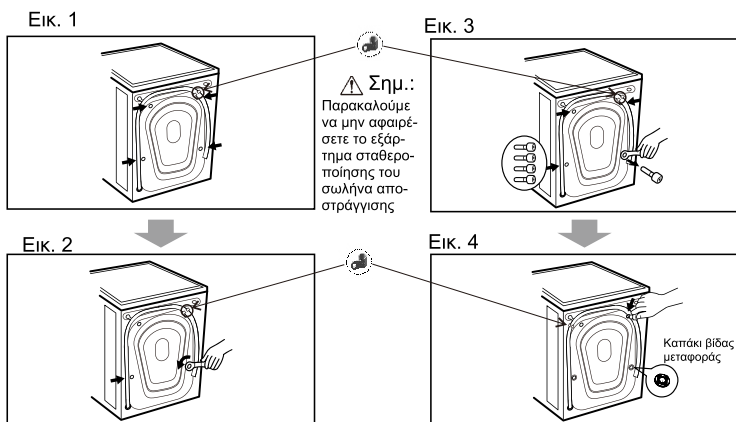

Απαιτήσεις για την εγκατάσταση

Ρύθμιση γωνίας κλίσης (οριζόντιο επίπεδο):


- Η γωνία κλίσης του πλυντηρίου πρέπει να είναι μικρότερη από 1 μοίρα.

Πρίζα ρεύματος:

- Η απόσταση μεταξύ οποιασδήποτε πλευράς του πλυντηρίου και της πρίζας πρέπει να το πολύ 1,5 μέτρα.
- Μην συνδέσετε πάρα πολλές ηλεκτρικές συσκευές σε μία πρίζα.

Καθαρισμός περιβάλλοντος χώρου:

- Είναι απαραίτητο να καθαρίζετε τακτικά τον τοίχο, τις πόρτες και το πάτωμα.
- Εγκαταστήστε το πλυντήριο ρούχων σε σκληρό και σταθερό έδαφος που να έχει κάποια κλίση ώστε να αποστραγγίζουν τυχόν νερά. Δεν συνιστάται η εγκατάσταση σε μαλακά χαλιά ή ξύλινα πατώματα.
- Μην βάζετε βρώμικα ρούχα ή άλλα αντικείμενα πάνω στο πλυντήριο, διαφορετικά μπορεί να επηρεαστεί αρνητικά η κανονική λειτουργία του.

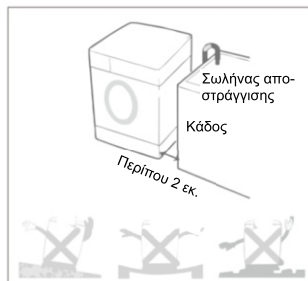

Προειδοποίηση

Σύνδεση ρεύματος

1. Μην χρησιμοποιήσετε τερματικό καλωδίωσης κ.ά.τ.
 2. Εάν είναι κατεστραμμένο το καλώδιο ρεύματος, επικοινωνήστε με εξειδικευμένο τεχνικό για επισκευή.
 3. Μετά τη χρήση του πλυντηρίου ρούχων αποσυνδέστε το φισ από την πρίζα ρεύματος και κλείστε την βρύση παροχής νερού.
 4. Συνδέστε το πλυντήριο ρούχων με γειωμένη πρίζα, ώστε η σύνδεση να συμμορφώνεται με τα σωστά πρότυπα καλωδίωσης.
 5. Τοποθετήστε το πλυντήριο ρούχων σε σημείο όπου να είναι εύκολο να συνδέετε και να αποσυνδέετε το φισ από την πρίζα ρεύματος.
- Επικοινωνήστε με το εξουσιοδοτημένο σέρβις και ζητήστε από τους επαγγελματίες τεχνικούς να επισκευάσουν το πλυντήριο σε περίπτωση που χαλάσει.
 - Μην τοποθετείτε το πλυντήριο ρούχων σε σημείο όπου η θερμοκρασία πέφτει κάτω από το μηδέν. Οι σωλήνες θα παγώσουν και θα σπάσουν. Επιπλέον, η θερμοκρασία κάτω από το μηδέν θα καταστρέψει τον ελεγκτή προγραμμάτων.
 - Αν μετακινήσετε το πλυντήριο ρούχων σε περιβάλλον όπου η θερμοκρασία είναι κάτω από το μηδέν, αφήστε το στη συνέχεια σε θερμοκρασία δωματίου για μερικές ώρες πριν το ενεργοποιήσετε ξανά.

Πληροφορίες σχετικά με τη γείωση

- Το πλυντήριο ρούχων θα πρέπει να είναι γειωμένο σωστά. Αν δημιουργηθεί οποιοδήποτε πρόβλημα και είναι γειωμένο, μειώνεται ο κίνδυνος ηλεκτροπληξίας. Το πλυντήριο ρούχων διαθέτει καλώδιο ρεύματος (που περιλαμβάνει φισ με ακίδα γείωσης). Το φισ αυτό θα πρέπει να συνδεθεί σε κατάλληλη πρίζα. Εάν θέλετε να βεβαιωθείτε ότι το πλυντήριο είναι γειωμένο σωστά, επικοινωνήστε με επαγγελματία τεχνικό. Εάν το φισ δεν ταιριάζει με την πρίζα, μην αλλάξετε μόνοι σας το φισ αλλά επικοινωνήστε με επαγγελματία τεχνικό.
- Αν το πλυντήριο ρούχων σας βγάζει καπνό ή άσχημη μυρωδιά, παρακαλούμε να διακόψετε την τροφοδοσία (δηλ. να αποσυνδέσετε το πλυντήριο ρούχων από το ρεύμα) και να επικοινωνήσετε με επαγγελματία τεχνικό.

Θα πρέπει να συνδέσετε το πλυντήριο ρούχων με παροχή νερού. Χρησιμοποιήστε τους καινούριους, παρεχόμενους σωλήνες και όχι τους παλιούς που τυχόν είχατε από προηγούμενο πλυντήριο ρούχων.

Προκειμένου να διασφαλιστεί η ποιότητα, διεξάγονται δοκιμές έγχυσης νερού πριν το πλυντήριο φύγει από το εργοστάσιο, οπότε μπορεί να υπάρχει κάποια ποσότητα νερού μέσα στον κάδο, στα λάστιχα της πόρτας και στο σώμα της πόρτας. Αυτό είναι φυσιολογικό.


Σύνδεση παροχής νερού

1. Η πίεση της παροχής νερού θα πρέπει να κυμαίνεται μεταξύ 30kPa και 1000kPa.

2. Μην φθείρετε το βιδωτό σπείρωμα όταν συνδέετε τους σωλήνες εισόδου με τις υποδοχές.

3. Αν η πίεση του νερού ξεπερνά τα 1000kPa, θα πρέπει να συνδέσετε στο κύκλωμα μειωτή πίεσης.

- Στις δύο άκρες του σωλήνα είναι ενσωματωμένες δύο τσιμούχες για αποφυγή διαρροής νερού.
- Ανοίξτε τη βρύση και ελέγξτε μήπως υπάρχει διαρροή στις συνδέσεις.
- Να ελέγχετε τακτικά τους σωλήνες. Παρακαλούμε να τους αλλάξετε σε περίπτωση που απαιτείται.
- Βεβαιωθείτε ότι οι σωλήνες δεν έχουν υποστεί φθορά και δεν έχουν συστραφεί.

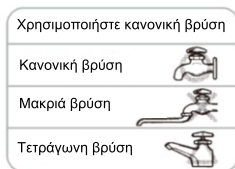


Λαστιχένιες τσιμούχες στο σωλήνα σύνδεσης νερού

Σύνδεση του σωλήνα παροχής νερού στη βρύση και στην υποδοχή εισόδου νερού στο πλυντήριο ρούχων

- 1** Ελέγξτε ότι υπάρχουν οι τσιμούχες και στις δύο πλευρές του σωλήνα. Βάλτε τeflόν στο εσωτερικό του σπειρώματος για να αποφύγετε διαρροές.



- 2** Συνδέστε τους σωλήνες παροχής νερού στις βρύσες σφίγγοντας καλά με το χέρι και στη συνέχεια σφίξτε κατά 2/3 της στροφής χρησιμοποιώντας πένσα. - Συνδέστε τον μπλε σωλήνα στην βρύση παροχής νερού.



ΠΡΟΣΟΧΗ! Μη σφίξετε υπερβολικά γιατί θα προκληθεί πρόβλημα στο σπείρωμα.

- 3** Αφού συνδέσετε το σωλήνα παροχής νερού στις βρύσες, ανοίξτε για λίγο τις βρύσες ώστε να απομακρυνθούν τυχόν ξένα αντικείμενα (π.χ. σκόνη, άμμος ή πριονίδι) που ενδέχεται να υπάρχουν μέσα στους σωλήνες νερού. Αφήστε το νερό να τρέξει σε μια λεκάνη και ελέγξτε τη θερμοκρασία του νερού.



- 4** Συνδέστε τους σωλήνες στην υποδοχή εισόδου νερού σφίγγοντας καλά με το χέρι και στη συνέχεια σφίξτε κατά 2/3 της στροφής χρησιμοποιώντας πένσα.



ΠΡΟΣΟΧΗ! Μη σφίξετε υπερβολικά γιατί θα προκληθεί πρόβλημα στη βαλβίδα και θα υπάρχει διαρροή νερού.

- 5** Ελέγξτε για διαρροές ανοίγοντας τις βρύσες. Αν υπάρχει διαρροή νερού, επαναλάβετε τα βήματα 1 έως 4.



- Αυτό το πλυντήριο έχει σχεδιαστεί για οικιακή χρήση. Μην το εγκαταστήσετε σε πλοίο, σε φορτηγό ή σε αεροπλάνο.
- Κλείστε την κεντρική βάνα παροχής νερού αν δεν πρόκειται να χρησιμοποιήσετε το πλυντήριο ρούχων για μεγάλο χρονικό διάστημα (π.χ. διακοπές).
- Αποσυνδέστε το φινις μετά τη χρήση ώστε να ξεκλειδώσει η ασφάλεια της πόρτας για να αποφύγετε την περίπτωση να κλειδωθεί κάποιο παιδί στο εσωτερικό του κάδου πλύσης.
- Τα υλικά συσκευασίας (π.χ. πλαστικό φιλμ, αφρός) είναι επικίνδυνα για τα παιδιά και μπορεί να προκαλέσουν ασφυξία!

Προσοχή:

ΦΥΛΑΞΤΕ ΟΛΑ ΤΑ ΥΛΙΚΑ ΣΥΣΚΕΥΑΣΙΑΣ ΜΑΚΡΙΑ ΑΠΟ ΠΑΙΔΙΑ.

Τοποθέτηση του σωλήνα αποστράγγισης

- Στερεώστε το σωλήνα αποστράγγισης χρησιμοποιώντας σχοινί.
- Για να μην υπάρξουν βλάβες ή διαρροή στο έδαφος, τοποθετήστε σωστά τον σωλήνα αποστράγγισης.
- Για να αποφευχθεί το φαινόμενο σιφονιού με αποτέλεσμα να μη γίνεται αποστράγγιση, το ύψος του σωλήνα αποστράγγισης πρέπει να είναι από 0,85 έως 1,25 μέτρα. Επιπλέον, η άκρη του σωλήνα αποστράγγισης δεν πρέπει να βυθιστεί σε νερό.
- Εάν ο σωλήνας αποστράγγισης είναι πολύ μακρύς, μην τον πιέζετε για να τον τοποθετήσετε στο πλυντήριο, γιατί θα προκληθούν περιεργοί θόρυβοι. (Δείτε τις παρακάτω εικόνες).

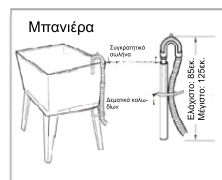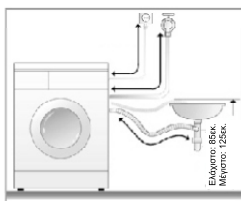

Οδηγίες τοποθέτησης του σωλήνα αποστράγγισης

Οριζόντια ρύθμιση


- Για την αποφυγή θορύβου και δονήσεων, θα πρέπει να ρυθμίσετε το πλυντήριο ρούχων ώστε να είναι σε επίπεδη θέση και – καλό είναι – να το τοποθετήσετε σε κάποια γωνία του δωματίου.
- Εάν το πάτωμα δεν είναι επίπεδο, προσαρμόστε τους πείρους ευθυγράμμισης. (Μην τοποθετείτε τάκους ξύλου ή παρόμοια υλικά). Βεβαιωθείτε ότι οι τέσσερις πείροι ευθυγράμμισης αγγίζουν το πάτωμα καλά και ότι το πλυντήριο είναι τελείως επίπεδο.



Μέθοδοι κλειδώματος πόρτας

- Η πόρτα θα κλειδώσει αυτόματα μετά την έναρξη ενός προγράμματος πλυντηρίου. Αυτή τη στιγμή, η λυχνία κλειδώματος της πόρτας θα είναι αναμμένη.
- Πατήστε το πλήκτρο "έναρξη/παύση" και περιμένετε μερικά δευτερόλεπτα αφού σταματήσει να περιστρέφεται ο κάδος πλύσης/στυψιματος. Εάν πληρούνται οι προϋποθέσεις ανοίγματος της πόρτας, η κλειδαριά της πόρτας θα απελευθερωθεί αυτόματα και η οθόνη ενδείξεων θα δείχνει ότι το φως της κλειδαριάς της πόρτας είναι σβηστό.
- Η πόρτα δεν μπορεί να ανοίξει ούτε κατά τη λειτουργία με υψηλή θερμοκρασία ούτε σε υψηλή στάθμη νερού στο πλύσιμο.
- Ξεχειλίζει αφρός εάν ανοίξετε την πόρτα κατά τη λειτουργία.
- Όταν η πόρτα δεν μπορεί να ανοίξει, η συσκευή ανοίγματος πόρτας έκτακτης ανάγκης μπορεί να χρησιμοποιηθεί σε περίπτωση έκτακτης ανάγκης.

ΧΡΗΣΗ ΤΗΣ ΘΗΚΗΣ ΑΠΟΡΡΥΠΑΝΤΙΚΟΥ

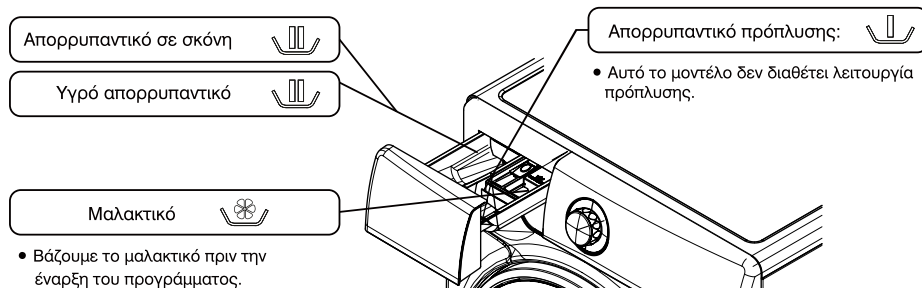

- Βάζουμε το μαλακτικό πριν την έναρξη του προγράμματος.
- Το πλυντήριο θα το χρησιμοποιήσει κατά το τελευταίο στάδιο του πλυσίματος.
- Δεν ξεπερνάμε την ένδειξη μέγιστης στάθμης.

- Χρησιμοποιούμε πάντα το κατάλληλο απορρυπαντικό σύμφωνα με τον τύπο των ρούχων, το χρώμα, τη θερμοκρασία νερού και τον βαθμό ρύπανσης.
- Δεν χρησιμοποιούμε μεγάλη ποσότητα απορρυπαντικού γιατί θα δημιουργηθεί μεγάλη ποσότητα αφρού που πιθανώς θα επηρεάσει την ποιότητα της πλύσης ή και θα προκαλέσει βλάβη στο πλυντήριο.
- Χρησιμοποιούμε απορρυπαντικά μέτριας δράσης για να προστατεύουμε τα ρούχα και το περιβάλλον.

Συστάσεις για τη χρήση απορρυπαντικών σε διάφορες θερμοκρασίες

- Όταν πλένουμε πολύ λερωμένα λευκά, συνιστάται να χρησιμοποιούμε το πρόγραμμα BAMBAKERPA με θερμοκρασία 60 °C ή μεγαλύτερη και σκόνης πλυσίματος ισχυρής δράσης που περιέχουν λευκαντικές ουσίες οι οποίες σε μεσαίες / υψηλές θερμοκρασίες παρέχουν εξαιρετικά αποτελέσματα.
- Για τις πλύσεις μεταξύ 40 °C και 60 °C, ο τύπος του απορρυπαντικού που θα χρησιμοποιήσουμε πρέπει να είναι κατάλληλος για τον τύπο του υφάσματος και τον βαθμό ρύπανσης. Για λευκά ή χρωματιστά υφάσματα με υψηλό βαθμό ρύπανσης χρησιμοποιούμε συνηθισμένες σκόνες, ενώ για χρωματιστά υφάσματα με χαμηλή ρύπανση χρησιμοποιούμε υγρά απορρυπαντικά ή σκόνες “προστασίας χρωματιστών”.
- Για πλύσιμο κάτω από 40 °C, συνιστάται η χρήση υγρών απορρυπαντικών ή απορρυπαντικών με ειδική σήμανση ως κατάλληλα για πλύση σε χαμηλές θερμοκρασίες.

Εισαγωγή στις Λειτουργίες του Πάνελ Ελέγχου



Η εικόνα που εμφανίζεται εδώ είναι ενδεικτική. Το πραγματικό προϊόν που θα παραλάβετε ενδέχεται να διαφέρει.

客户要翻译

1. On/Off Button

- Turn power ON/OFF.
- When procedure finish, press On/Off to cut off power.

2. Start/Pause Button

- Press it to start operating
- Press it to pause during operation, press again to continue.

3. Program Knob

- Select program according to variety and contamination of cloths.

4. Pre Wash Button

- If the cloths are too dirty, you can choose this program before washing.

5. Super Spa Button

- It means long-time washing at high temperature, and is suitable for the clothes, bedding and plush toys with high sterilization requirements and sensitive to mites and pollen

6. Delay Button

- Delay Time
- Delay time refers to the period from appoint to end .
- If want to cancel the function, push power button.

7. Temp. Button

- Select water temperature according to the variety and contamination degree.
- Different procedure, different water temperature range, some no choice.

8. Rinse button

- When push the power button to start the machine and select the program, you can choose the times of rinse by this button, which can make better washing performance.

9. Speed button

- When push the power button to start the machine and select the program, you can choose different spin speed.

10. My Cycle button

Set or call up common programs and parameters

- Memory saving: long press the “memory key” after startup to save the parameter configuration.
- Memory call out: press the “memory key” after next startup to call out the previously saved parameters for rapid setting.
- After the memory saving or call out, the memory icon light (heart-shaped icon ) above the memory key under the nixie tube will light up.
- In case of memory saving, issue “Ding Dong” sound twice; In case of memory call out, make three “Ding Ding Dong” sound in triple.
- Memory saving function only saves one of the most commonly used or preferred modes, with no saving of more than one parameter configuration.

11. Child-Lock button

- Press it to guard against child operating.
- Child-Lock operating, other buttons unavailable except “ On/Off ”.

12. Night Wash button

- When washing at night, selecting this function can turn off the sound of the buzzer and reduce the default speed to reduce the washing noise.

13. Display Screen

- To display the remaining time or delay time, remaining time gradually reduce in accordance with the washing.
- To display temp , delay time, rinse times, spin speed, when you adjust these options.
- During the process of washing, if there is a abnormal phenomenon, the screen will display the error code accordingly.
- If the remaining time is different with the real time, the program will adjust according to the real situation. It is not an error.

客户要翻译

Εισαγωγή στις λειτουργίες και τα προγράμματα

Πλύσιμο καθημερινών ρούχων

1 Προετοιμασία

- Ανοίξτε το πορτάκι, βάλτε ρούχα και κλείστε το.
 - Τραβήξτε έξω το κουτί του απορρυπαντικού, προσθέστε απορρυπαντικό και κλείστε το κουτί.
 - Συνδέστε τους σωλήνες εισόδου και βεβαιωθείτε ότι η παροχή νερού είναι ανοιχτή.
2. Πατήστε το κουμπί On/Off
 3. Τα προγράμματα μπορούν να επιλεγούν σύμφωνα με τις απαιτήσεις.
 4. Ανάλογα με τις απαιτήσεις, πατήστε το αντίστοιχο κουμπί για να ρυθμίσετε τη θερμοκρασία του νερού, τους χρόνους ξεβγάλματος, την ταχύτητα στυσίματος, τον χρόνο καθυστέρησης και τη λειτουργία πλύσης.
 5. Πατήστε το κουμπί Έναρξη/Παύση (Start / Pause) και ξεκινήστε το πλύσιμο.
 6. Όταν ολοκληρωθούν όλες οι λειτουργίες, ο βομβητής εκπέμπει ένα θόρυβο.
- Ανοίξτε την πόρτα για να βγάλετε τα ρούχα.
 - Αποσυνδέστε και απενεργοποιήστε τη στρόφιγγα.
-
- Εάν θέλετε να αλλάξετε την τρέχουσα ρύθμιση κατά τη διάρκεια της διαδικασίας πλύσης, πατήστε πρώτα το κουμπί Έναρξη/Παύση (Start / Pause) και σταματήστε το πλύσιμο και μετά πατήστε το κουμπί για επαναφορά.

Πρόγραμμα για Βαμβακερά (Cotton)

Αυτό το πρόγραμμα είναι κατάλληλο για ρούχα που είναι μέτρια ή ελαφρώς λερωμένα, όπως βαμβακερά, κλινοσκεπάσματα, εσώρουχα, πετσέτες και πουκάμισα, κ.λπ.

- Όταν το πλυντήριο πλένει πετσέτες, οι ίνες θα πιεστούν και η επιφάνεια θα γίνει τραχιά. Χρησιμοποιήστε μαλακτικό για να αποφύγετε όσο το δυνατόν περισσότερο αυτό το φαινόμενο.

Πρόγραμμα για Αθλητικά Ρούχα (Sports)

Πλύνετε τα αθλητικά ρούχα που πλένονται στο πλυντήριο.

Πρόγραμμα για Κλινοσκεπάσματα (Duvet)

Τα ρούχα πρέπει να έχουν την ένδειξη πλύσης στο πλυντήριο, όπως κλινοσκεπάσματα, σεντόνια, κουρτίνες κ.λπ.

- Οι ηλεκτρικές κουβέρτες και τα χαλιά δεν πρέπει να πλένονται (θα προκαλέσουν βλάβη στο πλυντήριο και θα καταστραφούν).
- Τοποθετήστε τα ρούχα σωστά και ομοιόμορφα στον κάδο κατά το στύψιμο, για να αποφύγετε μεγάλες δονήσεις.
- Βαριά ρούχα δεν πρέπει να είναι μπερδεμένα. Πρέπει να τοποθετούνται στο πλυντήριο αφού πρώτα τα τινάζετε.
- Ρούχα που δεν τοποθετήθηκαν σωστά μπορεί να προκαλέσουν αποτυχία στο στύψιμο. Βγάλτε τα, τινάζτε τα και τοποθετήστε τα ξανά.

Πρόγραμμα για Ευαίσθητα Υφάσματα (Delicate)

Πρόγραμμα για ευαίσθητα και μεταξωτά ρούχα.

Πρόγραμμα για Μωρουδιακά (Baby Care)

Αυτό το πρόγραμμα είναι για την πλύση βρεφικών ρούχων, ρούχων απόμων με αλλεργίες και ρούχων που απαιτούν υψηλή θερμοκρασία για την εξάλειψη βακτηρίων και ακάρεων.

- Όταν αφαιρείτε τα ρούχα, προσέξτε τον εσωτερικό ατμό που μπορεί να προκαλέσει εγκαύματα. Ανοίξτε την πόρτα για να διαφύγει πρώτα ο ατμός και στη συνέχεια αφαιρέστε τα ρούχα.

Σύντομο Πρόγραμμα (Storm Wash)

Η λειτουργία Storm Wash μειώνει τη διαδικασία πλύσης αυξάνοντας τη συχνότητα στροφών και μειώνοντας τον χρόνο αναμονής, συντομεύοντας έτσι τον χρόνο πλύσης κατά περίπου 30% και βελτιώνοντας την αποδοτικότητα.

Πρόγραμμα Ατμού

Η λειτουργία ατμού θερμαίνει το εσωτερικό του κάδου, βελτιώνοντας την απόδοση πλύσης και μειώνοντας τους λεκέδες.

Πρόγραμμα Ανάμεικτων Ρούχων (Mix)

Αυτό το πρόγραμμα χρησιμοποιείται για ανάμεικτα ρούχα όπως βαμβακερά, συνθετικά κ.λπ. (Μην αναμειγνύετε ρούχα που ξεβάφουν εύκολα).

- Χωρίστε τα λευκά ή ανοιχτόχρωμα ρούχα από τα σκούρα.

Πρόγραμμα Γρήγορο 15' (Quick 15')

Για το πλύσιμο ρούχων που αλλάζονται συχνά, ελαφρώς λερωμένων και λεπτών ρούχων.

Πρόγραμμα Γρήγορο 42' (Rapid 42')

Για το πλύσιμο ρούχων που αλλάζονται συχνά, ελαφρώς λερωμένων και λεπτών ρούχων.

Πρόγραμμα 20°C

Για το πλύσιμο ρούχων με μικρολεκέδες.

Πρόγραμμα για Μάλλινα (Wool)

Για υφάσματα με μάλλινη ύφανση, όπως μάλλινα ρούχα που πλένονται στο πλυντήριο.

- Μετά το πλύσιμο, βγάλτε τα ρούχα εγκαίρως και ανακινήστε τα για να αποφύγετε παραμορφώσεις.
- Χρησιμοποιήστε ειδικό απορρυπαντικό για μάλλινα για να μειώσετε τη φθορά και να βελτιώσετε τα αποτελέσματα.

Πρόγραμμα Ξέβγαλμα + Στύψιμο (Rinse + Spin)

Το πλυντήριο δεν θα εκτελέσει πρόγραμμα πλυσίματος, μόνο θα ξεβγάλει και θα στύψει.

- Η ταχύτητα στύψιμου μπορεί να επιλεγεί στην υψηλότερη τιμή, αλλά η θερμοκρασία δεν μπορεί να ρυθμιστεί.

Πρόγραμμα Μόνο Στύψιμο (Spin Only)

Το πλυντήριο δεν θα εκτελέσει πρόγραμμα πλυσίματος ή ξεβγάλματος, μόνο θα στύψει.

- Κατά το στύψιμο, η ταχύτητα μπορεί να διαφέρει από την προγραμματισμένη, καθώς το πλυντήριο προσαρμόζει την ταχύτητα σύμφωνα με την ισορροπία μεταξύ των ρούχων.

Πρόγραμμα Καθαρισμού Κάδου (Tube Clean)

Καθαρίζει τον εσωτερικό κάδο του πλυντηρίου. **Μην τοποθετείτε ρούχα σ' αυτό το πρόγραμμα.**

Στοιχεία προγραμμάτων ανά μοντέλο

Πρόγραμμα	Θερμοκρασία (°C)	Ταχύτητα στυψίματος (στροφές ανά λεπτό)	Χρόνος (min)
Βαμβακερά	40°C(κρύο νερό ,20°C,60°C,90°C)	1000(0,400,800,1200,1400)	75
Eco 40-60	40°C	1400	228
Αθλητικά	κρύο νερό (20°C,40°C)	800(0,400)	44
Παπλώματα	40°C(κρύο νερό,20°C)	800(0,400)	88
Ευαίσθητα	20°C(κρύο νερό,40°C)	800(0,400)	48
Βρεφικά	60°C(40°C,90°C)	800(0,400,1000)	142
Storm Wash	20°C(κρύο νερό,40°C,60°C)	800(0,400,1000,1200,1400)	39
Ατμός	60°C(κρύο νερό,20°C,40°C,90°C)	800(0,400,1000)	165
Μεικτά	κρύο νερό (20°C,40°C)	800(0,400)	76
Γρήγορο 15'	κρύο νερό (20°C,40°C)	800(0,400)	15
Γρήγορο 42'	20°C(κρύο νερό,40°C)	800(0,400)	42
20°C	20°C	1000(0,400,800,1200,1400)	63
Μάλλινα	40°C(κρύο νερό,20°C)	800(0,400)	47
Ξέπλυμα+ Στύψιμο	—	1000(0,400,800,1200,1400)	17
Στύψιμο	—	1000(0,400,800,1200,1400)	11
Καθαρισμός κάδου	60°C	800	75

Παρατηρήσεις:

- Η χρονική διάρκεια κάθε προγράμματος διαφοροποιείται ανάλογα με την πίεση νερού, τη θερμοκρασία, την ποσότητα και την ποικιλία των ρούχων.
- Ενδέχεται να υπάρχει μια μικρή διαφορά μεταξύ της εμφανιζόμενης στην οθόνη χρονικής διάρκειας και της πραγματικής.
- Εάν η ταχύτητα στυψίματος είναι πολύ χαμηλή, το πλύσιμο δεν θα είναι ικανοποιητικό, οπότε αυξάνουμε τον χρόνο ξεπλύματος.
- Η πραγματική θερμοκρασία νερού μπορεί να διαφέρει λίγο από αυτή που έχουμε ρυθμίσει.

ΣΥΝΤΗΡΗΣΗ

Ακολουθούμε τις παρακάτω οδηγίες συντήρησης προκειμένου να επεκτείνουμε τη διάρκεια ζωής του πλυντηρίου και να εξασφαλίσουμε την ομαλή του λειτουργία. Πριν από εργασίες συντήρησης αποσυνδέουμε το πλυντήριο από την πρίζα.


Καθαρισμός του περιβλήματος

Καθαρίζουμε το περίβλημα με μαλακό πανί. Αν κριθεί απαραίτητο, χρησιμοποιούμε κατάλληλο απορρυπαντικό ή σαπούνι.

- Δεν το πλένουμε απευθείας με νερό.
- Δεν χρησιμοποιούμε διαλυτικά, βενζίνη ή οινόπνευμα.

Καθαρισμός της θήκης απορρυπαντικού

Καθαρίζουμε τη θήκη απορρυπαντικού τακτικά. Για να την αφαιρέσουμε από το πλυντήριο, την τραβάμε έξω πιέζοντας προς τα κάτω (βλ. εικόνα), την πλένουμε με τρεχούμενο νερό και στη συνέχεια την ξαναβάζουμε στη θέση της.

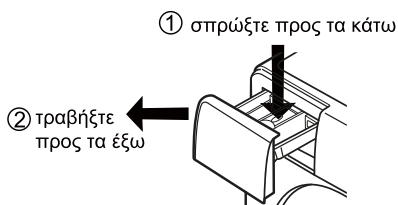

Δακτύλιος στεγανοποίησης πόρτας

Μετά από κάθε πλύσιμο καθαρίζουμε τον δακτύλιο στεγανοποίησης της πόρτας από τυχόν υπολείμματα.

Καθαρισμός φίλτρου αντλίας αποχέτευσης

- Απενεργοποιούμε τη συσκευή, την αποσυνδέουμε από την πρίζα και βεβαιωνόμαστε ότι δεν υπάρχει νερό στον κάδο.
Προσοχή! Εάν έχει προηγηθεί πρόγραμμα πλυσίματος, περιμένουμε μέχρι να κρυώσει η συσκευή.
- Τοποθετούμε ένα δοχείο κάτω από το καπάκι του φίλτρου της αντλίας ώστε να μαζέψουμε το νερό που θα χυθεί.
- Αφαιρούμε το καπάκι του φίλτρου.
- Ξεβιδώνουμε το φίλτρο ώστε να το αφαιρέσουμε.
- Καθαρίζουμε το φίλτρο από τα ξένα υλικά και το πλένουμε με νερό.
- Επανατοποθετούμε το φίλτρο (βιδώνοντάς το καλά).
- Τοποθετούμε το καπάκι πίσω στη θέση του.

Καθαρισμός του κάδου

Με την πάροδο του χρόνου και τη συχνή χρήση μπορεί να συσσωρευτούν υπολείμματα και βρωμιά στον κάδο. Μπορούμε να χρησιμοποιήσουμε το πρόγραμμα ΚΑΘΑΡΙΣΜΟΣ ΚΑΔΟΥ για να τον καθαρίσουμε.

1. Προετοιμασία
 - Βεβαιωνόμαστε ότι δεν υπάρχει τίποτα στον κάδο πριν τον καθαρισμό.
 - Τραβάμε τη θήκη απορρυπαντικού και προσθέτουμε χλωρίνη. Δεν προσθέτουμε απορρυπαντικό, ώστε να αποτρέψουμε τη δημιουργία υπερβολικού αφρού.
 - Κλείνουμε τη θήκη του απορρυπαντικού και την πόρτα του πλυντηρίου.
2. Πατάμε το κουμπί ON/OFF.
3. Πατάμε τα κουμπιά “ΤΑΧΥΤΗΤΑ” και “ΘΕΡΜΟΚΡΑΣΙΑ” για περισσότερο από τρία δευτερόλεπτα ταυτόχρονα, έτσι ώστε να επιλεγεί το πρόγραμμα ΚΑΘΑΡΙΣΜΟΣ ΚΑΔΟΥ.
4. Πατάμε το πλήκτρο ΕΝΑΡΞΗ/ΠΑΥΣΗ ώστε να ξεκινήσει το πρόγραμμα.
5. Όταν ολοκληρωθεί το πρόγραμμα, η οθόνη δείχνει END (τέλος), και ακούγεται ένα ηχητικό σήμα.
6. Μετά το τέλος του προγράμματος, σκουπίζουμε τον κάδο με ένα στεγνό πανί.

Προσοχή! Κατά το πρόγραμμα καθαρισμού του κάδου δεν χρησιμοποιούμε απορρυπαντικό και δεν βάζουμε ρούχα για πλύσιμο.

Όταν το πλυντήριο ρούχων είναι παγωμένο

- Καλύπτουμε τη βάνα παροχής νερού και τη σύνδεση του σωλήνα με μία καυτή πετσέτα.
- Αποσυνδέουμε τον σωλήνα παροχής νερού και τον βυθίζουμε σε νερό με θερμοκρασία 50 °C.
- Ρίχνουμε στον κάδο 2 έως 3 λίτρα νερό θερμοκρασίας 50 °C
- Συνδέουμε τον σωλήνα ξανά, ανοίγουμε τη βάνα και ενεργοποιούμε το πλυντήριο.
- Ελέγχουμε εάν η παροχή του νερού και η αποχέτευση λειτουργούν κανονικά.



Σημείωση: πριν από το πλύσιμο

1. Οδηγός πλύσης ρούχων





- Ελέγξτε την ταυτότητα του οδηγού πλύσης ρούχων, η οποία δείχνει την υφή των υφασμάτων και τη μέθοδο πλυσίματος.

2. Διαχωρισμός ρούχων

- Παρακαλούμε πλύνετε υφάσματα της ίδιας υφής σε κάθε πλύση. Ρούχα διαφορετικής υφής, διαφορετικού χρώματος πρέπει να διαχωρίζονται μεταξύ τους (λευκά-χρωματιστά) για να μην υπάρχουν αλλοιώσεις. Μην πλένετε καθαρά με πολύ λερωμένα ρούχα μαζί.

3. Σημειώσεις

- Όταν βάζετε μεγάλα και μικρά ρούχα μαζί, τοποθετήστε τα μεγάλα πρώτα, τα οποία πρέπει να είναι λιγότερα από το μισό των συνολικών ενδυμάτων. Μην πλένετε ένα ρούχο γιατί μπορεί να προκαλέσει προβλήματα ζυγίσματος του κάδου. Προσθέστε ένα ή δύο παρόμοια ρούχα.
- Μικρά ρούχα όπως κάλτσες και μαντίλια πρέπει να τοποθετούνται σε σάκους με πλέγμα για να πλυθούν. Πριν πλύνετε το σουτιέν με μπανέλες, παρακαλούμε να τις αφαιρέσετε. Εάν δεν είναι εύκολο να το κάνετε αυτό, παρακαλούμε να το βάλετε σε τσάντες με πλέγμα για να αποφύγετε οποιαδήποτε ζημιά μπορεί να προκληθεί.
- Ελέγξτε όλες τις τσέπες και βεβαιωθείτε ότι δεν υπάρχει τίποτα μέσα τους. Φουρκέτες, στυλό, νομίσματα και κλειδιά θα βλάψουν το πλυντήριο και τα ρούχα σας.
- Όλα τα ρούχα με φερμουάρ θα πρέπει να είναι κουμπωμένα, ώστε να διαβεβαιώσετε ότι άλλα ρούχα δεν θα καταστραφούν από αυτά.
- Χρησιμοποιήστε πρώτα το νερό με λίγο απορρυπαντικό για να πλύνετε και τα μέρη με πολλούς λεκέδες, όπως κολάρα και μανσέτες.
- Ελέγξτε το λάστιχο της πόρτας και βεβαιωθείτε ότι δεν υπάρχει διαρροή.
- Βεβαιωθείτε ότι δεν υπάρχει τίποτα στον κάδο του πλυντηρίου πριν το πλύσιμο.
- Βεβαιωθείτε ότι δεν έχει κολλήσει κάποιο πανί στο λάστιχο της πόρτας, για να αποφύγετε τη ζημιά που μπορεί να προκληθεί.

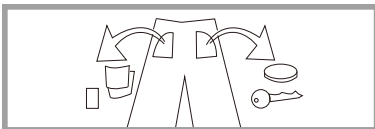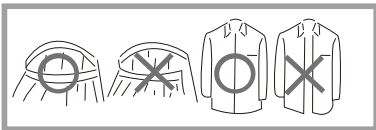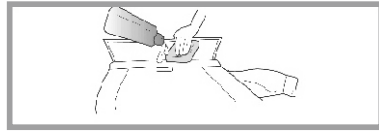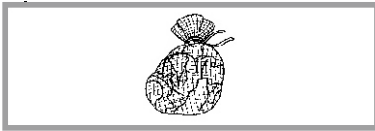

ΚΑΤΑΣΤΑΣΕΙΣ ΜΗ ΒΛΑΒΗΣ

Φαινόμενο	Αιτία
Η πόρτα δεν ανοίγει.	- Εκτελείται κάποιο πρόγραμμα. - Υπάρχουν ρούχα μεταξύ της πόρτας και της τσιμούχας στεγανοποίησης της πόρτας.
Μυρωδιά από λάστιχο.	Μπορεί να υπάρχει μια μυρωδιά από λάστιχο, διότι ορισμένα εξαρτήματα είναι κατασκευασμένα από καουτσούκ.
Υπάρχει πολύ λίγο νερό κατά το πλύσιμο ή το ξέβγαλμα.	Το πλυντήριο απλώς χρειάζεται μικρότερη ποσότητα νερού για συγκεκριμένες λειτουργίες.
Δεν υπάρχει παροχή νερού.	- Η βάνα της παροχής νερού είναι κλειστή. - Ο σωλήνας παροχής νερού είναι παγωμένος. - Τα φίλτρα είναι βουλωμένα.
Το νερό φτάνει μέχρι τη μέση του κάδου.	Εάν η στάθμη του νερού μειωθεί, το πλυντήριο αντλεί νερό αυτόματα.
Κατά τη διάρκεια του πλυσίματος, βγαίνει νερό από την πόρτα.	Ελέγχουμε αν το απορρυπαντικό δημιουργεί πολύ αφρό.
Αλλάζει ο υπολειπόμενος χρόνος προγράμματος κατά τη λειτουργία.	Αν τα ρούχα είναι ανισοκατανεμημένα, ο χρόνος στυψίματος παρατείνεται.
Ακούγεται περίεργος θόρυβος κατά τη διάρκεια της περιστροφής του κάδου.	- Το καλώδιο τροφοδοσίας έρχεται σε επαφή με το περίβλημα του πλυντηρίου. - Δεν έχουν αφαιρεθεί οι βίδες μεταφοράς. - Υπάρχουν κέρματα, ή άλλα μεταλλικά αντικείμενα στον κάδο.
Το πλυντήριο δεν λειτουργεί μετά από διακοπή ρεύματος.	Κατά την επαναφορά του ρεύματος, εάν το πλυντήριο δεν μπορεί να συνεχίσει, ρυθμίζουμε το πρόγραμμα από την αρχή.

ΑΝΤΙΜΕΤΩΠΙΣΗ ΠΡΟΒΛΗΜΑΤΩΝ

Πρόβλημα	Σημεία που πρέπει να ελέγξετε	Επίλυση
Το πλυντήριο δεν ξεκινάει.	-Ελέγξτε αν έχετε πατήσει το πλήκτρο Power ή το πλήκτρο Start/Pause. -Είναι η πρίζα βγαλμένη; -Υπάρχει διακοπή ρεύματος; -Ελέγξτε αν έχει διαρροή το προστατευτικό.	Πιέστε το πλήκτρο Power ή το πλήκτρο Start/Pause. Συνδέστε το καλώδιο στην πρίζα. Περιμένετε. Ανοίξτε το προστατευτικό.
Η οθόνη έχει την ένδειξη UE.	-Ελέγξτε μήπως δεν έχει αποσυναρμολογηθεί η βίδα μεταφοράς. -Είναι τοποθετημένη η συσκευή σταθερά; -Είναι τα ρούχα πολύ λίγα ή πολύ ελαφριά; -Είναι τα ποδαράκια σωστά ρυθμισμένα;	-Αποσυναρμολογήστε την βίδα μεταφοράς. -Τοποθετήστε την συσκευή σε στερεό έδαφος. -Προσθέστε περισσότερα ρούχα. -Ρυθμίστε τα ποδαράκια.
Η οθόνη έχει την ένδειξη IE.	-Ελέγξτε αν είναι κλειστή η βρύση. -Ελέγξτε αν έχει διακοπεί η παροχή νερού ή αν η πίεση του νερού είναι πολύ χαμηλή. -Είναι παγωμένοι οι σωλήνες; -Είναι μπλοκαρισμένα τα φίλτρα;	-Ανοίξτε την στρόφιγγα. -Περιμένετε. -Χρησιμοποιείτε ζεστό νερό για να ξεπαγώσετε τους σωλήνες. -Αφαιρέσετε τα φίλτρα και καθαρίστε τα.
Η οθόνη έχει την ένδειξη OE."	-Είναι οι εξωτερικοί σωλήνες τοποθετημένοι πολύ ψηλά; -Είναι οι εξωτερικοί σωλήνες παγωμένοι; -Είναι οι εξωτερικοί σωλήνες μπλοκαρισμένοι; -Είναι τα δοχεία αποστράγγισης μπλοκαρισμένα;	-Βεβαιωθείτε ότι είναι τοποθετημένοι μέχρι 1 μέτρο ψηλά. -Χρησιμοποιείτε ζεστό νερό για να ξεπαγώσετε τους σωλήνες. -Αφαιρέστε τα ξένα σώματα από τους σωλήνες. -Αφαιρέστε τα ξένα σώματα από το δοχείο αποστράγγισης/
Η οθόνη υπόδειξης προβλημάτων για την πόρτα δείχνει την ένδειξη DE.	Ελέγξτε μήπως ξεκινήσατε την πλύση χωρίς να κλείσετε την πόρτα καλά.	Βεβαιωθείτε ότι η πόρτα είναι καλά κλεισμένη.
Η οθόνη έχει την ένδειξη LE.	Βγάλτε την συσκευή από την πρίζα και καλέστε την Serviceworld.	
Η οθόνη έχει την ένδειξη FE.	Λόγω μη φυσιολογικής βαλβίδας εισαγωγής νερού και αισθητήρα στάθμης νερού	Κλείστε την παροχή νερού, βγάλτε τη συσκευή από την πρίζα και καλέστε την Serviceworld.
Η οθόνη έχει την ένδειξη LE ή CE όταν ο κάδος δεν περιστρέφεται.	Βγάλτε την συσκευή από την πρίζα και καλέστε την Serviceworld.	
Μεγάλη ποσότητα αφρού	Προσθέσατε μεγάλη ποσότητα απορρυπαντικού;	Προσθέστε την απαιτούμενη ποσότητα και το σωστό τύπο απορρυπαντικού.
Το σφάλμα του αισθητήρα στάθμης νερού, εμφανίζεται στην οθόνη PE	-Αν υπάρχει μεγάλη πίεση	Χαμηλώστε την πίεση Αν δεν διορθωθεί καλέστε την ServiceWorld
Απενεργοποίηση εμφανίζεται στην οθόνη PF	Απενεργοποιήστε και ενεργοποιήστε, πιέστε το κουμπί on/off, εμφανίζεται στην οθόνη PF για να δείξει ότι είχε απενεργοποιηθεί πριν. Το πλυντήριο μπορεί να είναι σε κανονική λειτουργία.	Πιέζοντας το κουμπί Έναρξη/Πάυση μπορεί να συνεχιστεί η λειτουργία που είχε πριν την απενεργοποίηση. Και οι άλλες λειτουργίες μπορούν να υποστούν επεξεργασία.

ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ

Ονομαστική χωρητικότητα πλυσίματος	9.0kg
Ονομαστική χωρητικότητα στुψίματος	9.0kg
Παροχή ρεύματος	220-240V~,50Hz
Ονομαστική κατανάλωση πλυσίματος	200W
Ονομαστική κατανάλωση στुψίματος	600W
Ονομαστική θερμαντική ισχύς	2000W
Μέγιστη κατανάλωση	2200W



Δηλώνουμε ότι τα προϊόντα μας πληρούν τις ισχύουσες Ευρωπαϊκές Οδηγίες, Αποφάσεις και Κανονισμούς, καθώς και τις απαιτήσεις που περιέχονται στα πρότυπα που αναφέρονται.

Υπηρεσία Εξυπηρέτησης Πελατών – Διαθεσιμότητα Ανταλλακτικών:

Σχετικά με τη λειτουργία γνήσια ανταλλακτικά, σύμφωνα με την αντίστοιχη διάταξη οικολογικού σχεδιασμού, μπορείτε να προμηθευτείτε από την υπηρεσία εξυπηρέτησης πελατών της εταιρείας μας για τη διάρκεια το λιγότερο 7 ετών από τη θέση σε κυκλοφορία της συσκευής σας εντός του Ευρωπαϊκού Οικονομικού Χώρου.

Σημείωση: Η χρήση της υπηρεσίας εξυπηρέτησης πελατών είναι στο πλαίσιο των όρων εγγύησης του κατασκευαστή δωρεάν.

Λεπτομερείς πληροφορίες για τον χρόνο εγγύησης και τους όρους εγγύησης στη χώρα σας, θα βρείτε στην καρτέλα εγγύησης που συνοδεύει την συσκευή καθώς επίσης και στην υπηρεσία εξυπηρέτησης πελατών της εταιρείας μας ή τον έμπορό σας

ΓΕΝΙΚΟΙ ΟΡΟΙ ΚΑΙ ΠΡΟΥΠΟΘΕΣΕΙΣ

1. Η εγγύηση καλύπτει κάθε ανωμαλία ή βλάβη που οφείλεται αποκλειστικά στην κατασκευή της συσκευής ή σε ελαττωματικά εξαρτήματα.
2. Κατά τη διάρκεια της εγγύησης η εργασία, τα έξοδα μετακίνησης του τεχνικού και τα ανταλλακτικά παρέχονται δωρεάν, καθώς και η μεταφορά της συσκευής (εξαιρούνται οι μικροσυσκευές) αποκλειστικά με τα συνεργαζόμενα πρακτορεία, αν ο τεχνικός κρίνει ότι η επισκευή πρέπει να γίνει στο service της εταιρείας.
3. Η εταιρεία μας έχει το δικαίωμα να καθορίζει τον τρόπο και τόπο επισκευής των βλαβών κατά την κρίση της. Ειδικά το σέρβις των μικροσυσκευών παρέχεται στην έδρα του εκάστοτε συμβεβλημένου καταστήματος σέρβις, η δε μεταφορά τους πραγματοποιείται από τον κάτοχο της συσκευής.
4. Σε περίπτωση αδικαιολόγητης κλήσης, απουσίας, προβλημάτων εγκατάστασης ή ανάγκη επίδειξης λειτουργίας, ο πελάτης επιβαρύνεται με τα έξοδα κίνησης και το κόστος επίσκεψης του τεχνικού.
5. Η εγγύηση παύει να ισχύει σε περίπτωση που στη συσκευή έχει επέμβει για επιδιόρθωση άλλος τεχνικός, εκτός από τον εξουσιοδοτημένο τεχνικό της εταιρείας μας, ή έχει παραποιηθεί ή απομακρυνθεί το rating label και ο σειριακός αριθμός της συσκευής.
6. Ενδεχόμενη επισκευή ή αντικατάσταση μερών μίας συσκευής ή της ίδιας της συσκευής δεν παρατείνει τη διάρκεια της εγγύησης, η οποία συνεχίζει σε κάθε περίπτωση έως τη λήξη της.
7. Σε περίπτωση αντικατάστασης κάποιου εξαρτήματος μίας συσκευής, παρέχεται εγγύηση 6 μηνών για το συγκεκριμένο εξάρτημα ή ανταλλακτικό, αρχής γενομένης από την ημερομηνία αντικατάστασης.
8. Η εγγύηση δεν ισχύει για βλάβες που προκαλούνται άμεσα ή έμμεσα από αμέλεια, παράλειψη, κακή χρήση, κακή εγκατάσταση ή πάσης φύσεως επέμβαση στη συσκευή από μη εξουσιοδοτημένο συνεργείο. Επίσης, δεν ισχύει για βλάβες που οφείλονται σε εξωγενείς παράγοντες που αλλοιώνουν την υφή της συσκευής (όπως Π.χ. χημικά, τοξικά, άλατα κ.τ.λ.), καθώς και για βλάβες προερχόμενες από κακή σύνδεση σε τάση διαφορετική από την αναγραφόμενη στην πινακίδα της συσκευής, σε μη γειωμένο ρευματοδότη (πρίζα) και σε μεταβολές τάσης του δικτύου (πτώση, υπέρταση).
9. Η εγγύηση δεν καλύπτει βλάβες ή απώλειες των συσκευών ή παρελκόμενων τους, που οφείλονται σε μεταφορές, που γίνονται με ευθύνη του πελάτη από τρίτους.
10. Η εγγύηση δεν θίγει τα δικαιώματα του αγοραστή όπως αυτά προβλέπονται βάσει της Ευρωπαϊκής Οδηγίας 1999/44/EC και της Ελληνικής νομοθεσίας.
11. Η εγγύηση πρέπει απαραίτητα να συνοδεύεται από φωτοαντίγραφο του τιμολογίου αγοράς ή του δελτίου λιανικής πώλησης ή του δελτίου αποστολής του προϊόντος.
12. Εκτός των δικαιωμάτων που παρέχονται με την παρούσα εγγύηση στον καταναλωτή, αυτός έχει σε κάθε περίπτωση και όλα τα δικαιώματα που απορρέουν από τις κείμενες διατάξεις και τους νόμους σχετικά με τη σύμβαση πώλησης.

ΕΙΔΙΚΟΙ ΟΡΟΙ: ΣΥΣΚΕΥΕΣ Omny

1. Η εγγύηση καλής λειτουργίας ισχύει από την ημερομηνία αγοράς της συσκευής και έχει διάρκεια δύο (2) χρόνια.
2. Κάθε συσκευή ελέγχεται προσεκτικά κατά την παραγωγή και δεν γίνεται αντικατάστασή της παρά μόνο σε περίπτωση ανεπανόρθωτης βλάβης ή επαναλαμβανόμενης ίδιας βλάβης ή λόγω υψηλού κόστους της επισκευής, σύμφωνα με την γνωμάτευση του εκάστοτε συμβεβλημένου τεχνικού συνεργάτη.
3. Στην εγγύηση δεν περιλαμβάνονται λαμπτήρες φωτισμού, κεραμικές επιφάνειες, αξεσουάρ, καθώς και τα πλαστικά, επισμαλτωμένα και γυάλινα μέρη των συσκευών, εκτός εάν αποδειχθεί πως πρόκειται για κατασκευαστικό ελάττωμα.
4. Οι ζημιές που προκαλούνται κατά τη μεταφορά της συσκευής δεν καλύπτονται από την εγγύηση.
5. Όλα τα προϊόντα Omny είναι κατασκευασμένα για συνθήκη οικιακή χρήση. Η εγγύηση δεν καλύπτει βλάβες που προκύπτουν σε συσκευές που χρησιμοποιούνται στα πλαίσια επαγγελματικής χρήσης.

Εγγύηση

Πριν χρησιμοποιήσετε τη συσκευή, βεβαιωθείτε ότι έχετε διαβάσει τις οδηγίες χρήσης που τη συνοδεύουν.

Σας ενημερώνουμε ότι η συγκεκριμένη συσκευή καλύπτεται από εγγύηση καλής λειτουργίας, για 2 χρόνια, σύμφωνα με τους όρους που προβλέπονται παραπάνω. Αν για οποιοδήποτε λόγο παρουσιαστεί κάποιο τεχνικό πρόβλημα, παρακαλώ όπως επικοινωνήσετε με το:

Τμήμα Τεχνικής Υποστήριξης της Westnet

Email: service.ha@mywestnet.com
Τηλεφωνικό Κέντρο: +30 211 3002190
Λεωφόρος Μεσογείων 249,
ΤΚ. 154 51
Νέο Ψυχικό – Αθήνα
Website: <https://omnyshome.com>

Παρακαλούμε να έχετε διαθέσιμα σε κάθε περίπτωση τα ακόλουθα:

- Απόδειξη αγοράς
- Περιγραφή προϊόντος / Τύπος / Μάρκα
- Περιγραφή του εμφανιζόμενου προβλήματος με όσο το δυνατόν πιο ακριβή αναφορά του ελαττώματος

Εισάγεται, Διανέμεται και Κατασκευάζεται από

WESTNET DISTRIBUTION ΜΟΝΟΠΡΟΣΩΠΗ Α.Ε. ΔΙΑΝΟΜΩΝ ΕΜΠΟΡΙΟΥ ΒΙΟΜΗΧΑΝΙΑΣ ΠΑΡΑΓΩΓΗΣ
ΕΔΡΑ: ΘΗΒΑΪΔΟΣ 22 – Τ.Κ. 145 64 ΚΗΦΙΣΙΑ Α.Φ.Μ.: 999645171 – Δ.Ο.Υ.: Φ.Α.Ε. ΑΘΗΝΩΝ ΤΗΛ.:
211 3002150 – FAX: 212 212 19382



Front Loading Washing Machine

WFB-9B14STWBX

User Manual

Caution: Read and follow all safety and operating instruction before first use of this product.

WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in launderettes.
- For washing machines having ventilation openings in the base, the openings must not be obstructed by a carpet.
- Manual loss, Call our service number.
- Water pressure: 0.03-1 MPa.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Safety Notifications (Please Must Follow)

- In order to prevent the harm or damage to the user or the person and property of others, please make sure to follow the safety issues.



Warnings

- The risk of electric shock.

1. Please use 220V-240V, above 10A with ground wire dedicated socket.
2. When inserting and pulling out the power cord please use the plug, please. Don't use the damaged power cord. When the power cord pin is dirty please wipe clean with dry cloth. in time.
3. Do not use the wet hand to insert or pull out the plug.
4. Please pull out the plug when finishing, repairing or cleaning.

- The danger of fire and current leakage

1. Do not allow the washing machine close to the fire, or lighted cigarettes, candles and volatile materials.
2. Please do not sprinkle the water on the control panel of the washing machine.
3. Please do not put the washing machine outside or in a wet place.
4. Please fix the drain pump and make sure the sewer is unobstructed.

- The danger of high temperature

1. When washing in high temperatures, the door glass will be heating. Please do not touch the door glass, especially children.
2. When opening the door after high temperature washing, please wait for the temperature to cool down to a safe level and the door will be unlocked automatically.

- The danger of getting hurt

1. Please handle the carton box after removing, don't let the children touch or eat.
2. Do not allow the children to operate or climb up to the washing machine.
3. Please close the door after use to avoid the children entering the drum.

- The danger of injury

1. Do not put any heavy things on the top of the washing machine.
2. If you want to move the machine, please remember to ask for help.
3. Please do not ask unprofessional people to repair the machine.

- The danger of damage the clothes

1. Please do not wash the clothes which is waterproof, like Raincoat, feather products, sleeping bags
2. Please wash the clothes which can be washed, if you have any doubt, please following the instructions.


- The danger of explosion


1. Please do not wash the cloths which stained with kerosene, gasoline, thinner, inflammable goods.
2. Please do not wash when there gas leakage.

- When pulling out the plug, the lock can be unlocked even if there is a lot of water inside. So please check the water level inside before unlocking the door in order to avoid the unnecessary loss.

Part name

Attachment specification

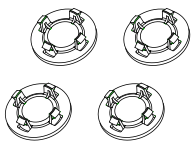instruction	water supply hose	wrench	transportation bolt caps
			

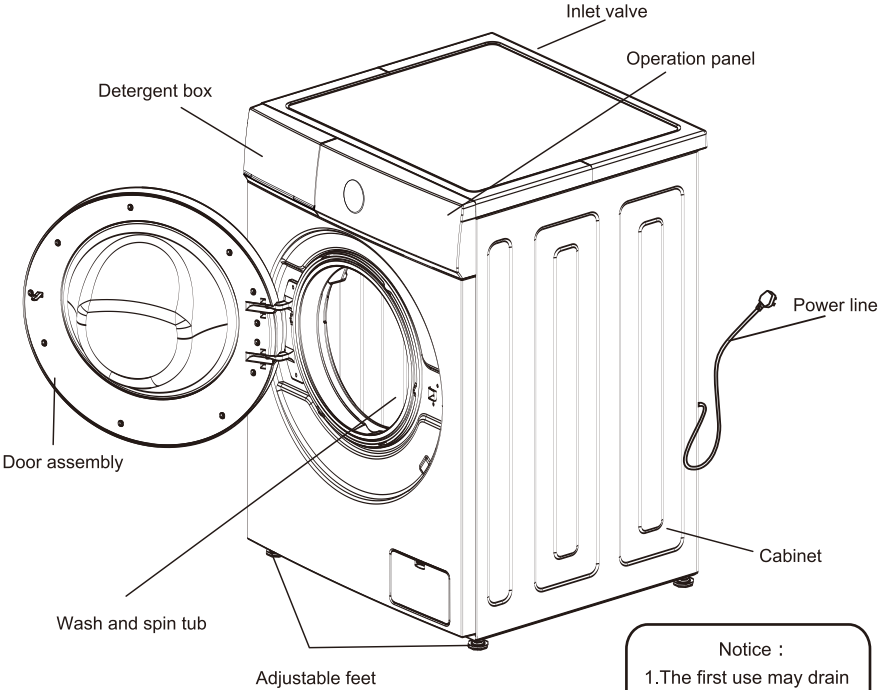

Important notice:

- 1.The product appearance and specifications may be varied without notice to raise the product quality.
- 2.The product appearance and specifications may be varied with that of the related energy efficiency test or the related safety test,etc.

Notice :

- 1.The first use may drain some water out. It's residual water after performance test, belong to the normal phenomenon.
- 2.After each use, please pull the plug and turn off the faucet to prevent accidental flood or fire.

Installation instruction


- Make sure the temperature of the places where the washer is installed or placed above 0°C or put it outside.
- Place the washer correctly according to management standards and regulations.
- Keep the base of washer ventilated when it is placed on the ground with carpet.
- There are too much pests in villages. Please keep the surroundings clean because any damages caused by cockroaches or other pests don't belong to warranty.

Transport bolt

Washers are installed with transport bolt to prevent internal damage in transit.

Dismantle the transport bolt

1. In order to prevent internal damage in transit, 4 bolts are installed. Before using the washer, dismantle the bolt (see chart 1).
- If the bolts are not dismantled, violent vibration, noise and trouble will be caused.
2. Use the attached wrench to loosen the 4 bolts (see chart 2).
3. Twist the bolt rubber slightly and then pull out the bolts, keep the bolts and wrench as standby (see chart 3).
- The bolts should be remounted no matter when to transport the washer.
4. Use attached stopples to seal the screw holes (see chart 4).

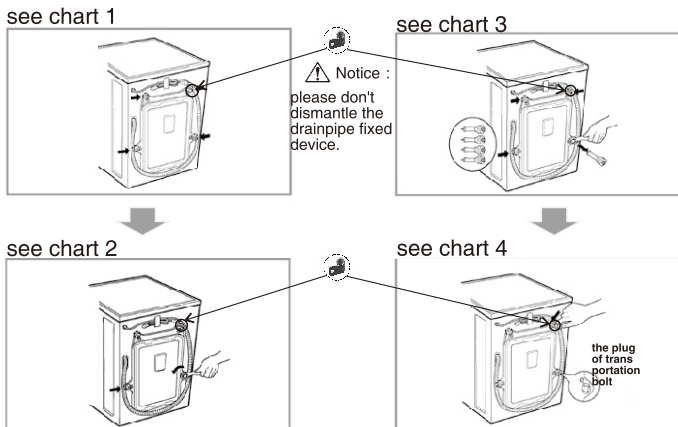

Requires for positions

Horizontal adjustment:

- The slant angle should be less than 1 degree.

Power outlet

- The distance between any side of washer and power outlet should be within 1.5 meters.
- Don't use too many electrical appliances in one outlet.

Environment cleaning

- It's necessary to clean the wall, door and ground.
- Install the washer on a hard and steady ground with floor drain rather than soft blanket or wooden floor.
- Don't put dirty clothes or some other goods on a washer's head cover, otherwise it may impact the normal operation.


⚠ Notice

Power connection

1. Don't use the wiring board or something like that.
 2. If the power lines are damaged, please contact professionals to repair.
 3. After the use of washer, pull the plug and turn the tap off.
 4. Connect the washer with grounded outlet to correspond to the wiring principles.
 5. Place the washer in which is easy to connect the outlet.
- Contact the maintenance center and ask professionals to repair the washer. Laypeople may cause damages and troubles on the washer.
 - Don't put the washer in the place where the temperature is below zero. The pipes will be frozen and break. Moreover, the temperature below zero will damage the programming controller.
 - If move the washer in an environment whose temperature is below zero, please keep the washer at room temperature for a few hours before starting it.

Grounding introduction

- A washer must have the grounding devices. If a trouble happens, the device can reduce the risk of electrical shock. The device is equipped with a cable (including a wire and a grounded plug). The grounded plug must be inserted in an appropriate outlet. If you want to know if the washer is grounded correctly, please contact with professional maintenance staff. If the plug can't match with the outlet, please don't change the plug by yourself.
- Once your washer smokes or emits an odor, please cut the power and contact with professional maintenance staff.

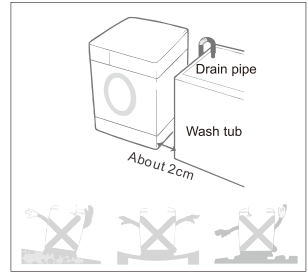

Washers should be connected with water inlet. Please use attached new plumbing rather than the old.

In order to ensure the quality, water injection tests are carried out before the washer leaves factory, so there may be water inside the internal tub, door seals and door panel, which are normal.

Water inlet connection


1. The pressure of supply water should be between 30kPa and 1000kPa.
 2. Don't abrade the screw thread when connect the inlet pipes with valves.
 3. Please install dropping equipment if the pressure of supply water surpasses 1000kPa.
- Two seals are supplied in the connectors of both ends of the pipe to prevent water leaking.
 - Turn on the tap and check if the connectors leak.
 - Check the pipes regularly. Please change them if necessary.
 - Make sure the pipes don't be damaged or twine with each other.

Use the standard faucet

standard faucet 

longer faucet 


square faucet 




water pipe connector
rubber gasket

The connection of inlet pipes and taps

- 1 Check the rubber seals on both sides of the hose.
 - insert a rubber seal into the threaded fittings on each hose to prevent leaking.

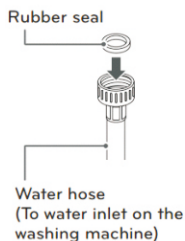


- 2 Connect the water supply hoses to the water faucets tightly by hand and then tighten another 2/3 turn with pliers.
 - Connect the blue hose to water faucet.




⚠ WARNING

- Do not overtighten. Damage to the coupling can result.

- 3 After connecting inlet hose to water faucets, turn on the water faucets to flush out foreign substances (dirt, sand or sawdust) in the water lines. Let water drain into a bucket, and check the water temperature.



- 4 Connect the hoses to the water inlet tightly by hand and then tighten another 2/3 turn with pliers.



⚠ WARNING




- Do not overtighten the hoses. Overtightening can damage the valves resulting in leaking and property damage.

- 5 Check for leaks by turning on the faucets. If water leaks, check steps 1 to 4 again.

- Such washing machine is designed for home appliances, please do not install it on ship, traveling truck or plane.
- Please turn off the stopcock if long time out of use.
(e.g vacation)
- Please remove plug and cancel door lock function to avoid child locking himself/herself inside.
- Packing materials(e.g film, foam) could harm child's safety and cause asphyxia! Attention: MAKE ALL PACKING MATERIEALS OUT OF CHILD REACH.

Install drain-pipe

- Please fix the drain-pipe by a lifting rope.
- For the sake of lightening damage of leak towards ground, please place the drain-pipe correctly.
- In order to avoid siphon,the height of drain-pipe should between (0.85m-1.25m),moreover, the terminal of is should not be placed in water.
- If the drain-pipe is too long, please do not force to insert it into washing machine, which would cause abnormal noise.
(Please check sketch map next page)

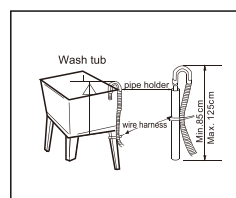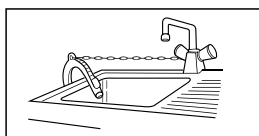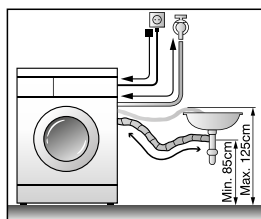

The instruction of installation of pipe

Horizontal Adjustment

- To avoid noise and vibrate by adjusting washing machine level. place it at the room corner preferably.
- If ground not level, please adjust alignment pins. Do not put wood pieces or something like, please make sure four alignment pins touch ground tightly, and machine level completely.




- **Adjust adjustable feet**

Adjust the adjustable feet to make sure the washing machine in balance, which can be placed on the ground steadily. After settling, screw the locknut to guarantee. Do not place the washing machine in the platform, which is higher than the ground, in order to prevent the machine from falling down because of other accidents.

- **The diagonal check**

Applying force downward on the diagonal of the washing machine, washing machine should not shake. (both diagonal need to check, if the washing machine shake, must readjust adjustable foot.)

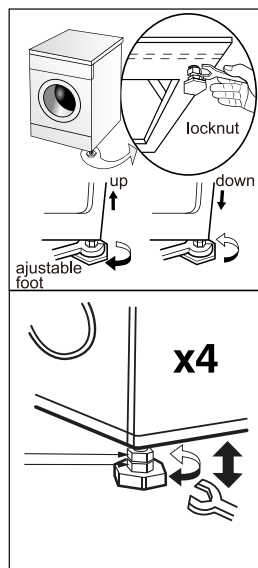

Methods of Door Lock and Remove

Door locking / unlocking

- The door will lock automatically after a laundry program starts. At this time, the door lock lamp is on.
- Press the “start / pause” key, and wait for a few seconds after the washing / dewatering tub stops rotating. If the door opening conditions are met, the door lock will be released automatically, and the display screen shows that the door lock light is off.
- The door cannot be opened either during high temperature operation or under high water level in washing.
- When the door cannot be opened, the emergency door opening device can be used in case of emergency.

The Usage Method of the Detergent Box

Synthetic Detergent Powder



- Please dissolve detergent (e.g soap pieces) before putting into detergent box.

Liquid detergent. Bleach




- Please use detergent with less foam.
- Please use two times water to dilute the concentrated type detergent before putting into detergent box.

Softener



- Please put softener before washing, which will pour into drum automatically when last patch happening.
- When using concentrated type softener, please dilute it with appropriate water.
- Do not exceed MAX mark.

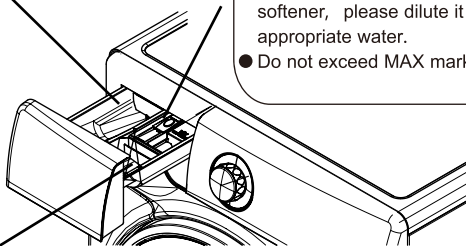

Prewashing Detergent



- Please put moderate detergent after selecting Pre-washing function if cloths is too dirty.

The above picture is just for reference, the detailed information should be based on the real product!

- Use special detergent.
- Do not use too much detergent which will cause too much foam and affect washing quality or will cause malfunction.
- Select detergent according to cloths variety, color, water temperature and contamination level.
- Please use moderate detergent to get washing effect and protect environment.

The Recommendations on detergent use at the various temperatures

- When washing heavily soiled whites, we recommend using cotton programs of 60°C or above and a normal washing powder (heavy duty) that contains bleaching agents that at medium/high temperatures provide excellent results.
- For washes between 40°C and 60°C, the type of detergent used needs to be appropriate for the type of fabric and level of soiling. Normal powders are suitable for "white" or colour fast fabrics with high soiling, while liquid detergents or "colour protecting" powders are suitable for coloured fabrics with light levels of soiling.
- For washing at temperatures below 40°C we recommend the use of liquid detergents or detergents specifically labeled as suitable for low temperature washing.

Function Introduction of Operating Panel



Image shown here is indicative only. Actual product you receive may differ.

1. On/Off Button

- Turn power ON/OFF.
- When procedure finish, press On/Off to cut off power.

2. Start/Pause Button

- Press it to start operating
- Press it to pause during operation, press again to continue.

3. Program Knob

- Select program according to variety and contamination of cloths.

4. Pre Wash Button

- If the cloths are too dirty, you can choose this program before washing.

5. Super Spa Button

- It means long-time washing at high temperature, and is suitable for the clothes, bedding and plush toys with high sterilization requirements and sensitive to mites and pollen

6. Delay Button

- Delay Time
- Delay time refers to the period from appoint to end .
- If want to cancel the function, push power button.

7. Temp. Button

- Select water temperature according to the variety and contamination degree.
- Different procedure, different water temperature range, some no choice.

8. Rinse+ button

- When push the power button to start the machine and select the program, you can choose the times of rinse by this button, which can make better washing performance.

9. Speed button

- When push the power button to start the machine and select the program, you can choose different spin speed.

10. My Cycle button

Set or call up common programs and parameters

- Memory saving: long press the “memory key” after startup to save the parameter configuration.
- Memory call out: press the “memory key” after next startup to call out the previously saved parameters for rapid setting.
- After the memory saving or call out, the memory icon light (heart-shaped icon ) above the memory key under the nixie tube will light up.
- In case of memory saving, issue “Ding Dong” sound twice; In case of memory call out, make three “Ding Ding Dong” sound in triple.
- Memory saving function only saves one of the most commonly used or preferred modes, with no saving of more than one parameter configuration.

11. Child-Lock button

- Press it to guard against child operating.
- Child-Lock operating, other buttons unavailable except “ On/Off ”.

12. Night Wash button

- When washing at night, selecting this function can turn off the sound of the buzzer and reduce the default speed to reduce the washing noise.

13. "Soil Level" button

- Customer can select this option based on the clothing soiled level, the function will be enabled when be selected, and program will automatically control the washing time and rhythm.
soil level has 3 levels(normal,heavy,extra heavy),normal→heavy→extra heavy→default(option light off)is a completed cycle.

14. Water inlet fault icon

- Washing machine water inflow timeout alarm.

15. Display Screen

- To display the remaining time or delay time, remaining time gradually reduce in accordance with the washing.
- To display temp , delay time, rinse times, spin speed, when you adjust these options.
- During the process of washing, if there is a abnormal phenomenon, the screen will display the error code accordingly.
- If the remaining time is different with the real time, the program will adjust according to the real situation. It is not an error.

The introduction of function and program

Usage of routine clothes

1.Preparations

- Open the door put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the On/Off button

3.The programs can be selected according to requirements.

4. According to the need, push corresponding button to set water temperature, rinse times, spin speed, delay time and washing mode.

5.Press Start/Pause button and begin to wash.

6.When all operations finished, the buzzer emits a noise.

- Open the door to get cloths out.
- Unplug and turn off the stopcock.

- If you want to change the current setting during the process of washing, please push "Start/Pause" button first and stop washing, then push button to reset.

Cotton Program

This program is suitable for the clothes which are moderate or mild dirty, like cotton, beddings, underwear, towels and shirt, etc...

- When the washing machine washing towel, the yarn will be squeezed, washing will get rough surface, using the fiber softening agent, to prevent this kind of phenomenon happens to the greatest extent.

Sports Program

Wash the machine- washable sports clothes

Duvet Program

The cloths have the machine-washable mark, like bedding, bed sheets, curtains, etc

- The electric blanket and carpet cannot be washed.(It will damage the machine and clothes).
- Put the clothes in the washing drum properly and uniform when spinning, in order to avoid large vibration.
- Heavy clothes cannot be entanglement ,need to put inside the washing machine after shaking loose.
- Uneven clothes can lead to not spinning , take out clothes, shake them off and put them in again.

Delicate Program

Washing gauze, silk underclothes.

Baby Care Program

This program is to wash infant clothing, allergy people clothing and clothing need high temperature bacteria suppression mite.

- When taking out of clothes, please pay attention to the internal heating steam. To avoid scald, Open the door to exhaust first, and then remove clothes.

Storm Wash Program

Storm wash reduces laundry process by increasing beat frequency, reducing dwell time, which shortens the laundry time by about 30%, making the most of efficiency utilization.

Steam Program

The steam function is activated to have the inner drum environment heated, leading to the improvement on washing performance and dirt reduced.

Mix Program

This function can be used to wash mix clothes like cotton, synthetic and soon (please do not mix wash the clothes that easily rub off).

- Please separate white or bright color clothes from dark clothes.

Quick 15' Program

To wash clothes that are changed frequently, not too dirty and thin clothes

Rapid 42' Program

To wash clothes that are changed frequently, not too dirty and thin clothes

20°C Program

Wash minor stains

Wool Program

Wash wool fiber texture, such as machine washable wool fabrics, etc.

- After washing completed, take the clothes in time, drying, after shaking loose plastic deformation in order to avoid placing time is too long.
- Please separate white or bright color clothes from the dark clothes for washing.
- Using special wool detergent can reduce clothing damage, improve the washing effect.

Rinse+Spin Program

The machine will not wash, only rinse and spin.

- The spin speed can be selected the highest, but the temperature cannot be set.

Spin Only Program

The machine will not wash and rinse, only spin.

- During the process of spinning, the actual spinning speed may be inconsistent with the program speed, which is because the washer adjust the speed according to the balance between clothes.

Tub Clean Program

Clean the inside bucket of the washing machine briefly. Please do not put clothes in it.

The introduction of washing programs

Program	Temperature (°C)	Spin Speed (Run/Min.)	Time(m)
Cotton	40°C(cold water,20°C,60°C,90°C)	1000(0,400,800,1200,1400)	75
Eco 40-60	40°C	1400	228
Sports	cold water(20°C,40°C)	800(0,400)	44
Duvet	40°C(cold water,20°C)	800(0,400)	88
Delicate	20°C(cold water,40°C)	800(0,400)	48
Baby Care	60°C(40°C,90°C)	800(0,400,1000)	142
Storm Wash	20°C(cold water,40°C,60°C)	800(0,400,1000,1200,1400)	39
Steam	60°C(cold water,20°C,40°C,90°C)	800(0,400,1000)	165
Mix	cold water(20°C,40°C)	800(0,400)	76
Quick 15'	cold water(20°C,40°C)	800(0,400)	15
Rapid 42'	20°C(cold water,40°C)	800(0,400)	42
20°C	20°C	1000(0,400,800,1200,1400)	63
Wool	40°C(cold water,20°C)	800(0,400)	47
Rinse+Spin	——	1000(0,400,800,1200,1400)	17
Spin Only	——	1000(0,400,800,1200,1400)	11
Tub Clean	60°C	800	75

Instruction:

- 1.The needed time canbe changed due to water pressure, drain condition, clothing textile,weight, water temperature changing.
- 2.During the process of washing,the time of washing and spinning will be different with the real running time.
- 3.During the process of washing,the real display time will beat according to sensing the weight changing of clothing.
- 4.Due to different weight of clothing and detergent, if the spin speed is too low, the rinse performance will not be good, please increase times of rinse.
- 5.The data in the chart can be different from different models.
- 6.When editing the default program as energy efficiency program, washing time will increase automatically.

Maintenance

- Please maintenance washing machine to extend service life.
- Before maintenance, please unplug.

Body of washing machine

After washing, please clean it with soft cloth. If much contamination, please use appropriate detergent or soap.


- Do not watering directly.
- Do not use putty-powder, diluent, gasoline, alcohol to clean machine body.

Door Gasket Ring

After washing, please remove contamination, wastepaper and so on, if foreign matter exists, please remove.


The Clearance of Detergent Box

Please clean the detergent box regularly. Pull it out and wash with clean water, then insert back.

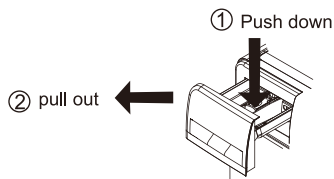


The Clearance of Universal coupling (Suggest:Once/ half year)

- If waste accumulated, it will influence water inlet speed.
 - 1.Take off the soft pipe from connecting part side.
 - 2.Take off the screwing device according to the arrow showed.
 - 3.Wash the inside of the screwing device.
 - 4.Install the cleaned crewing device with the inlet soft pipe.



The clearance of inlet water valve (Suggest:Once/ half year)


- 1.Take off the soft pipe from washing machine side.
- 2.Take off the filter net from water valve.
- 3.Clean the filter net with tooth-brash.
- 4.Install the soft inlet pipe.

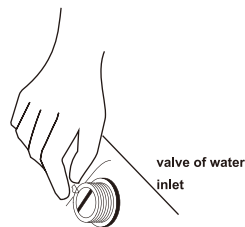

Maintenance

When washing machine is frozen

1. Cover stopcock and connecting part with hot towel.
2. Take off the inlet pipe, and put it into 50 degree water.
3. Pour into the drum about 2-3L of 50 degree water.
4. Connect inlet pipe, turn on the stopcock and start the washing machine, please check whether inlet and outlet is normal.

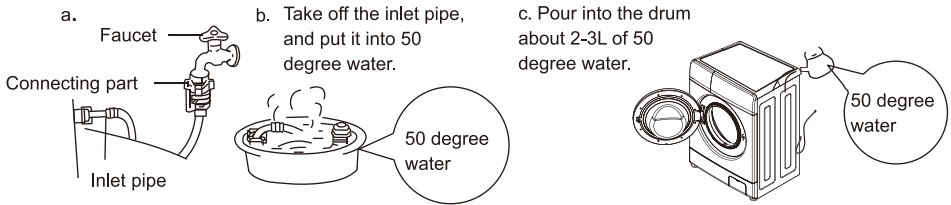

The Clearance of dewatering-pump filter(Suggest: once/month)

1. Press fastener on the pump after dewatering and power off, open the lid of water-pump filter.(Attention: if hot water inside, please go ahead after it be cold.)
2. Take off the filter anti-anticlockwise.
3. Wash the filter.
4. Direct at pump and insert the filter, tighten it clockwise and tighten the lid.
Attention: a. Please tighten the filter well to avoid leak.
b. Please do not clean during operation.

The Drum Clearance (Suggest once/month)

After using for a period, some dirt maybe exist. You can clean the inside and outside of drum by operating the drum procedure.

Attention: please do not put cloths and detergent when clearing the drum.

Notice before Washing

1.Washing guide identification




- Please check cloths washing guide identification ,which shows cloths texture and washing method.

2.Classification washing

- Please wash cloth of the same texture, different texture, different water temperature, speed and washing procedure, please split deep colored cloths from white cloths.Split dyed cloths from cotton, otherwise the white cloths would be discolored. If possible,please do not washing high contaminated cloths with clean ones together.
- The degree of pollution (serious, moderate,slight) classify clothes and wash according to the degree.
- color (white, light color, deep color) classify them and wash.
- velveteen (easy to fall off, easy to be adhered) classify the white and the deep color.

3. Notes

- When put big and small clothes together, put the big first and they have to be less than half of total clothes. Please don't wash single cloth because it may cause the trouble of imbalance. Please add one or two similar clothes.
- Small clothes like silk stockings and handkerchiefs should be put into mesh bags to wash. Before washing the bra with steel rings, please take the rings off. If it is inconvenient to do this, please put them into mesh bags to prevent the bra slipping into the gap between internal and external tubs.
- Check all pockets and make sure nothing in them. Nails, hairpin, match, pen, coin and key will damage your washer and clothes.
- Zip up all clothes, fix the button and hook and tie the loose belt, make sure that other clothes cannot be damaged by them.
- Firstly use the water with a little detergent to wash the parts with too many stains, such as collar and cuffs, which can make the clothes cleaner.
- Check the door seals and make sure nothing on them.
- Make sure there is nothing in the tub before washing.
- Please use the low bubble detergent specially for front loading washing to wash the cloths.



Non-fault conditions

The door can't open.	● The program is running. ● There are clothes between the door and door seals.
There is an odor.	● There may be a smell of rubber because some components are made up of rubber.
There is too little water when wash and rinse.	● Roller washing machine just needs a little water when operating.
No water inflowing.	● Is the tap turned on? ● Is the inlet pipe frozen? ● Are the filters blocked?
Water inflows halfway	● If the water level declines, the washer will supply water automatically.
Water outflows when washing.	● Check if add the detergent with too much bubbles.
Remaining time changes	● If clothes are off center when spin, spinning time will extend to correct the deviation.

There is abnormal noise when spin.

- Check if the power line touches with cabinet.
- Have the transport bolts been dismantled?
- Are there some hairpins or coins in the roller?

The washer can't work after the failure of electricity.

- The washer will stop working after the failure of electricity. When the power is restored, it still can't continue to work. Please press the power button and reset the program.

Troubleshooting Guide

Phenomenon	check points	solutions
Washer can't start	● Check if press the power button or start/pause button? ● Is the plug pulling out? ● Is there a power failure? ● Check if cut the leakage protector?	Press the power button or start/pause button. Connect the plug. Please wait. Open the leakage protector.
Spinning screen shows "UE"	● Check if disassemble the carriage bolt? ● Is the machine placed steadily? ● Are the clothes too small or light? ● Are the locknuts on under the feet tightened up?	Disassemble the carriage bolt. Place the machine on a steady ground. Add more clothes. Tighten up the locknuts.
Water inflow screen shows "IE"	● Check if turn the tap off? ● Is the water supply cut off or the water pressure too low? ● Are the water inlet pipes frozen? ● Are the filters blocked?	Open the stopcock. Please wait. Use hot water to unfreeze the pipes. Take out the filters and clean them.
Water outflow screen shows "OE"	● Are the outlet pipes placed too highly? ● Are the outlet pipes frozen? ● Are the outlet pipes blocked? ● Are the floor drain blocked?	Please put away the outlet pipes and make sure the height within 1M. Use hot water to unfreeze the pipes. Take out the foreign matter and dredge the pipes. Clean the floor drain.
Door trouble screen shows "DE"	● Make sure if start the washer without closing the door well.	Make sure the door truly closed
Not heating screen shows "LE"	● Please pull out the plug and call for the after sale service	
Keep water inletting without stop, screen shows "FE"	● Due to the abnormal of water inlet valve and water level sensor	Shut the water tap, pull out the plug and call for the after sale service
The wash drum does not running, screen shows "LE" or "CE"	● Please pull out the plug and call for the after sale service	
Too much bubble	● If adding the amount of detergent is more than the suggested? ● If use the low bubble detergent which is especially for front loading washing machine?	Add proper amount of detergent. Use the correct type of detergent.
The fault of water level sensor, the screen shows "PE"	● If the water level sensor has fallen off or not? ● If the water level sensor pipe blocked or there is a big pressure?	Tighten the sensor. Open the water pipe excluded congestion or pressure
Power off, the screen shows "PF"	● Power off then power on, push the "Power" button, the screen display "PF" to indicate that the power has powered off before. The machine can be in normal operation.	To push the button of "Start/Pause" can continue the operations before power off. And the other operations can be processed.

Specification

Rated washing capacity	9.0kg
Rated spinning capacity	9.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	600W
Rated heating power	2000W
Maximum power	2200W

Specification and feature are subject to change without prior notice for purpose of product improvement .

Environmental Protection

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.



WARRANTY TERMS FOR HOME APPLIANCES (White Goods & Small Appliances)

GENERAL TERMS AND CONDITIONS

1. The warranty covers any fault or damage that is solely due to a manufacturing defect or faulty components.
2. During the warranty period, labor, technician's travel expenses, and spare parts are provided free of charge, as well as transportation of the device (excluding small appliances) exclusively with partner agencies, if the technician deems that the repair should be carried out at the company's service center.
3. Our company reserves the right to determine the method and location of the repair of faults at its discretion. Specifically, service for small appliances is provided at the premises of the respective authorized service store, and transportation is carried out by the device owner.
4. In case of an unjustified call, absence, installation issues, or need for a demonstration of functionality, the customer will bear the travel costs and the cost of the technician's visit.
5. The warranty is void if the device has been repaired by a technician other than the company's authorized technician, or if the rating label and serial number of the device have been altered or removed.
6. Any repair or replacement of parts of a device or the device itself does not extend the warranty period, which will continue to be valid until its expiration.
7. In the event of a part replacement, a 6-month warranty is provided for that specific part or spare part, starting from the replacement date.
8. The warranty does not cover damages caused directly or indirectly by negligence, omission, misuse, improper installation, or any type of intervention on the device by an unauthorized technician. It also does not cover damages due to external factors that alter the device's surface (e.g., chemicals, toxins, salts, etc.), or damages arising from poor connection to a voltage different from what is indicated on the device's label, to an ungrounded socket, or due to voltage fluctuations in the network (drop, surge).
9. The warranty does not cover damages or losses to devices or their accessories caused during transportation arranged by the customer through third parties.
10. The warranty does not affect the buyer's rights as provided by European Directive 1999/44/EC and Greek legislation.
11. The warranty must be accompanied by a photocopy of the purchase invoice, retail receipt, or shipping document of the product.
12. In addition to the rights provided by this warranty, the consumer also retains all rights granted by the applicable provisions and laws concerning the sales contract.

 We declare that our products comply with the applicable European Directives, Decisions, and Regulations, as well as the requirements contained in the referenced standards.

Customer Service – Spare Parts Availability:

Dear customer

Regarding the operation of genuine spare parts, in accordance with the relevant eco-design regulation, you can obtain them from our company's customer service for at least 7 years from the date your device is placed on the market within the European Economic Area.

Note: The use of the customer service is free of charge under the manufacturer's warranty terms.

Detailed information regarding the warranty period and terms in your country can be found in the warranty card that accompanies the device, as well as through our company's customer service or your retailer.

2 YEARS WARRANTY

SPECIAL TERMS: Omnys DEVICES

1. The warranty for proper functioning is valid from the date of purchase and lasts for two (2) years.
2. Each device is carefully inspected during production, and it will only be replaced in the event of irreparable damage, repeated identical damage, or due to high repair costs, according to the assessment of the respective authorized technician.
3. The warranty does not cover light bulbs, ceramic surfaces, accessories, or the plastic, enamelled, and glass parts of the devices unless it is proven to be a manufacturing defect.
4. Damage caused during the transportation of the device is not covered by the warranty.
5. All Omnys products are designed for normal household use. The warranty does not cover damage to devices used for professional purposes.

Warranty

Before using the device, please ensure that you have read the accompanying user instructions.

Please note that this device is covered by a two-year warranty for proper functioning, according to the terms outlined above. If any technical problem arises for any reason, please contact:

Westnet Technical Support Department

Email: service.ha@mywestnet.com

Phone Center: +30 211 3002190

249 Mesogeion Avenue,

P.O. Box 154 51,

Neo Psychiko, Athens

Website: <https://omnyshome.com>

Please have the following information available in every case:

- Proof of purchase
- Product description / Model / Brand
- Description of the issue, with the most accurate reference to the defect

Imported, Distributed, and Manufactured by

WESTNET DISTRIBUTION SINGLE-MEMBER S.A. DISTRIBUTORS OF TRADE, INDUSTRY, AND
MANUFACTURING

Headquarters: Thivaidos 22 – P.O. Box 145 64 Kifisia

VAT Number: 999645171 – Tax Office: F.A.E. Athens

Phone: 211 3002150 – Fax: 212 212 19382



XXXXXXXXXXXXXXXXXXXX (A)